




Using Undermount Slides


Step 1. Measure cabinet opening

Measurements of the cabinet opening are required to determine the size of the drawer box.

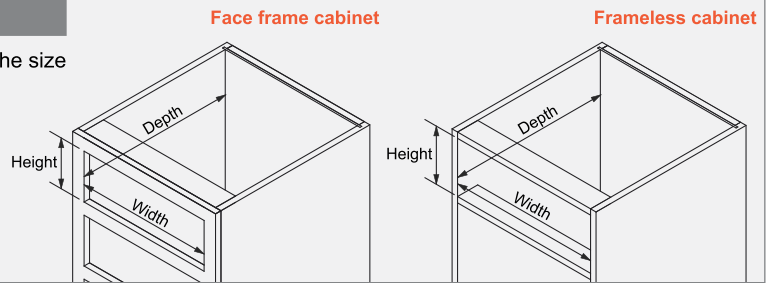


Step 2. Select undermount slides

Refer to the products pages and select the best fitting undermount slides for your application by considering factors such as drawer side thickness, load capacity, and cabinet depth. For more detailed information, please consult the relevant catalog page.

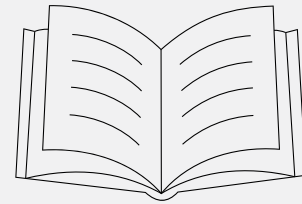


Step 3. Preparing drawer boxes

Construct the drawer based on the specifications for the selected undermount slides and the measurements determined in Step 1. Install the suitable locking devices and drill holes for the rear hooks.

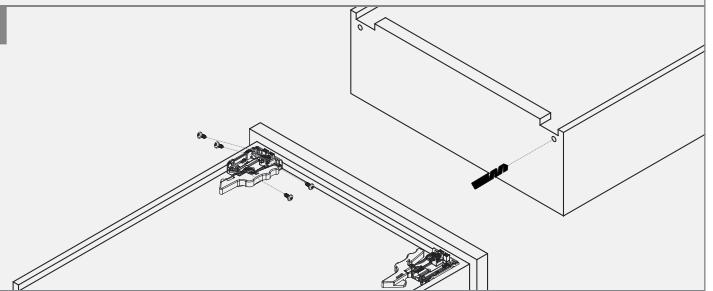


Step 4. Attach undermount slides to the cabinet

Based on the provided information for the selected undermount slides install the runners inside the cabinet.

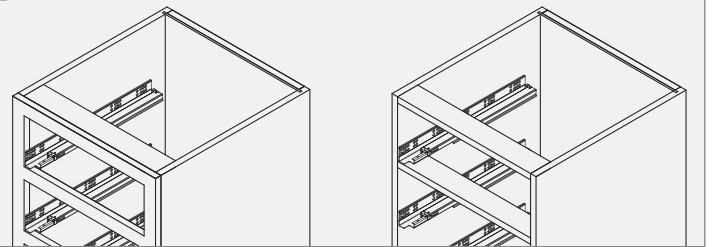

Step 5. Insert drawers

Fully extend the slides. Position the drawer on the slides and close it. The locking devices will automatically engage with the slides. Make adjustments if necessary.

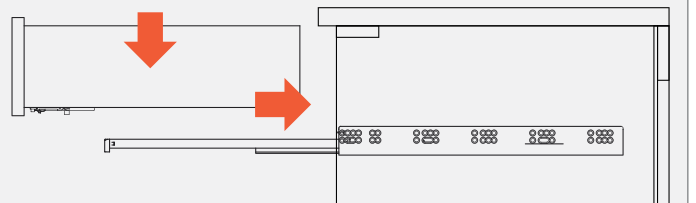

Step 6. Drawer removal

Squeeze the orange handles on the locking devices and pull the drawer straight out and upward.

